



INSTRUCTION FOR USE:

1. REGISTER SERIAL NUMBER AT G PEN.COM/REGISTER.
2. FULLY CHARGE G PEN ROAM FROM MICRO USB PORT LOCATED ON FRONT OF BATTERY.
3. THE BATTERY LEVEL IS DISPLAYED ON THE LED SCREEN.
4. PRESS THE POWER BUTTON LOCATED ON FRONT FACE OF ROAM BATTERY FIVE TIMES TO POWER ON/OFF.
5. THE BUTTONS LOCATED ABOVE THE LED SCREEN CAN ADJUST THE TEMPERATURE UP AND DOWN BY 25 DEGREE INTERVALS. THE TEMPERATURE RANGE IS FROM 600 TO 800 F (315 TO 425 C). ONCE THE DEVICE IS SET AT 800 F (425C) PRESS THE UP BUTTON ONE TIME TO GO TO MAX MODE, THE DEVICE WILL OUTPUT FULL POWER WITHOUT TEMPERATURE CONTROL. IF THE DEVICE OVERHEATS, A WARNING HAND WILL BE DISPLAYED AND THE DEVICE WILL STOP UNTIL SAFE OPERATING TEMPERATURE IS REACHED.
6. PRESS THE POWER BUTTON AND TEMPERATURE UP BUTTON FOR THREE SECONDS TO TOGGLE BETWEEN CELSIUS AND FAHRENHEIT.
7. FILL GLASS TUBE WITH WATER NO HIGHER THAN THE ETCHED WATERMARK LINE.
8. PLACE CONCENTRATES ONTO HEATING ELEMENT USING THE TOOL INCLUDED INSIDE THE KIT.
9. FOR AUTOMATIC HEAT ACTIVATION, PRESS THE POWER BUTTON TWO TIMES. ONCE THE SELECTED TEMPERATURE HAS BEEN REACHED, THE DEVICE WILL VIBRATE NOTIFYING THE USER TO BEGIN DRAWING FROM THE MOUTHPIECE. THE DEVICE WILL REMAIN AT TEMPERATURE FOR 30 SECONDS THEN VIBRATE AGAIN BEFORE HEAT IS DEACTIVATED. PRESS THE POWER BUTTON TWO TIMES TO EXTEND HEAT 10 SECONDS AFTER DEACTIVATION. DURING HEAT ACTIVATION, PRESS THE POWER BUTTON TWICE TO CANCEL HEAT AT ANY TIME.
10. FOR MANUAL HEAT ACTIVATION, HOLD POWER BUTTON WHILE DEVICE IS POWERED ON. THE DEVICE WILL HEAT UP TO SELECTED TEMPERATURE, VIBRATE TO INDICATE THAT THE TEMPERATURE HAS BEEN REACHED AND MAINTAIN THAT TEMPERATURE UNTIL THE BUTTON IS RELEASED OR UNTIL 30-SECOND TIME LIMIT HAS ELAPSED.
11. IN CASE OF A SHORT CIRCUIT OR CONNECTION PROBLEM, THE LED SCREEN WILL DISPLAY AN 'X' POINTING UP TOWARDS THE HEATER. CHECK TANK CONNECTION AND TRY AGAIN.
12. WHEN REPLACING THE QUARTZ TANK, ENSURE THE TAB AT THE BOTTOM OF THE QUARTZ TANK IS ALIGNED WITH THE CAVITY IN THE QUARTZ TANK COVER. WAIT AT LEAST FIVE MINUTES AFTER HEAT IS DEACTIVATED BEFORE HANDLING THE QUARTZ TANK COVER.
13. TO CLEAN: COTTON SWABS AND ISOPROPYL ALCOHOL ARE RECOMMENDED FOR CLEANING QUARTZ TANK, TANK COVER, AND SILICONE MOUTHPIECE. THE SILICONE AIRFLOW CHANNEL TUBING AT BACK OF BATTERY CAN ALSO BE REMOVED FOR CLEANING SEPARATELY.
14. THE BATTERY CAN BE CHARGED AT 5V UP TO 1A. LESS THAN 90 MINUTES ARE REQUIRED TO FULLY CHARGE THE DEVICE USING 1A. BATTERY CAPACITY IS 1300 MAH, APPROXIMATELY 15 AUTOMATIC HEATING SESSIONS PER FULL CHARGE.

FOR TUTORIAL, VIDEOS, INFORMATION AND MORE, PLEASE VISIT G PEN.COM/ROAM.

CONTACT CUSTOMER SERVICE:

☎ 1-800-948-7480

✉ INFO@G PEN.COM

🐦 @G PEN / 📷 @G PEN



EST. 2016

CANATURA

HEMP FOR LIFE

Canatura - Online store with the best
hemp products for your health

www.canatura.com/en

Copyright reserved