



## XMAX V3 Pro Manual

Thank you for purchasing the XMAX V3 PRO. To ensure the best experience, please read and understand the instructions fully before your first use of the XMAX V3 PRO. We strongly recommend you keep these instructions for future reference. We hope you enjoy the excellent quality and performance of your new XMAX V3 PRO.

User must be of legal age within any given jurisdiction to purchase or use the XMAX V3 PRO, use this product in moderation. This product should not be used by a child, while driving or operating heavy machinery, minors, or women who are pregnant and/or breast feeding and those with life threatening illnesses without first consulting a doctor.

California Prop 65 WARNING: This product contains chemicals known by the state of California to cause cancer birth defects or other reproductive toxicity. The vaporized aerosol of chemicals are known to cause respiratory or other diseases and in some cases are irreversible. If needed contact your local poison control center,  
USA: AAPCC 1-800-222-1222.


Note that the XMAX V3 PRO is not a medical device and is not intended to administer medicinal or illegal substances of any kind, diagnose, cure, treat or prevent any diseases or other conditions. Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under the law of their (and/or other) jurisdictions.

**THIS PRODUCT DOES NOT CONTAIN ANY BOTANICAL MATERIAL.**


# OPERATION GUIDE

Notice: Please remove protection tab in battery compartment before using.

## XMAX V3 PRO OVERVIEW

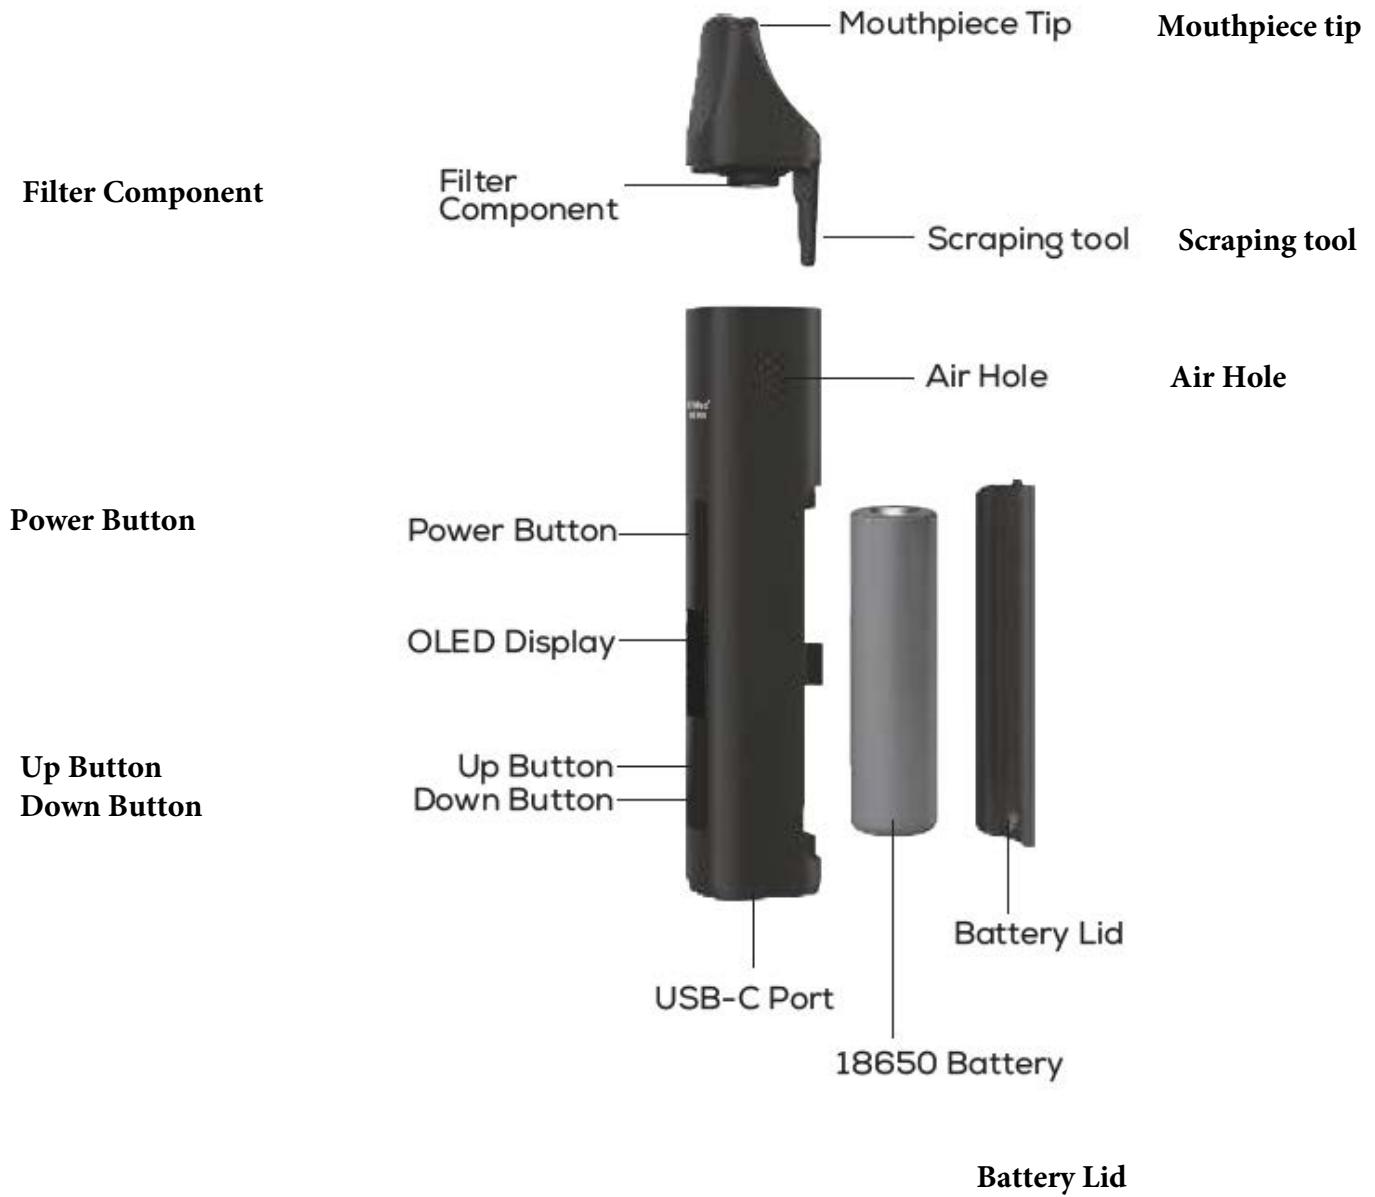

## XMAX V3 PRO CONTENTS



USB-C Cable



4 Alcohol Cotton Pads



Wax Cup



Brush



3 Cotton Swabs

## SPECIFICATIONS

Battery Capacity	18650 3.7V 2600mAh
Charging Voltage/Current	5V/ 1A
Working Voltage	3.2-4.2V
On/Off	Click the button 3 times consecutively
Temperature Range	100°C-220°C (212°F-428°F)
Oven Material	Stainless Steel
Display Screen	OLED
Session Time	4 minutes/6 minutes
On-demand Single Holding Time	30s
Size	26.6* 23.8*15.2mm (1.05*0.94*5.9inch)

## 1. CHARGE

Fully charge device before first use. Please use the provided USB-C cable to charge your device. The display screen will show charging, and be always on when fully charged.



(1)

## 2. LOAD

Remove the magnetic mouthpiece lid and choose which botanical substance is best for you. Due to the oven's delicate technology, please be gentle when packing the oven and/or inserting the oven cup and / or cleaning.

### Botanical flower:

Loosely pack the ground substance in the oven chamber, do not let the substance beyond the top of the oven chamber.



### Botanical Concentrate:

Insert the concentrate/wax cup into the oven chamber, use the dab/scraping tool to load the desired substance into the cup.



heat up under the default settings or your last temperature setting.

Under "ON DEMAND" mode, the device will automatically become "STANDBY" Mode if not being used within 30 seconds. Then it will automatically power off if not being used within the next 120 seconds.

Click the power button 3 times to turn off and the XMAX V3 PRO will vibrate to indicate shut down.

## 4. ENJOY XMAX V3 PRO

Two Modes available While heating, the OLED display temperature will go up, ” ” will flash as well. ESSION Mode: The device vibration indicates readiness and the timer countdown starts. Inhale through the mouthpiece, this device will automatically begin vaping.

ON DEMAND Mode: Keep holding the power button for less than 30 seconds once while inhaling.



## 5. TEMPERATURE SETTINGS

Press or hold the “up button” to increase temperature, press or hold the “down button” to decrease temperature.

Click to change by degree, hold to change quickly

Temperature Range :  
100°C-220°C (212°F-428°F)



(5)

## 6. TIMER SWITCHOVER

XMAX V3 PRO has 2 session timers, 4 minutes and 6 minutes. To switchover the 4 minutes and 6 minutes, just hold the “power button and “up button” at the same time for 2 seconds.



## 7. FAHRENHEIT AND CELSIUS SWITCHOVER

To switchover to fahrenheit, hold the “power button” and “down button” at the same time for 2 seconds.



## 8. MODE SWITCHOVER


To switchover to “ON DEMAND” mode, click the “up button” and “down button” simultaneously once. Keep holding the “power button” for less than 30 seconds once while inhaling when under “ON DEMAND” Mode.

The device will automatically power off if not being used within 120 seconds.

Click the “up button” and “down button” simultaneously once, then switchover to “SESSION” mode.



## 9. OLED DISPLAY

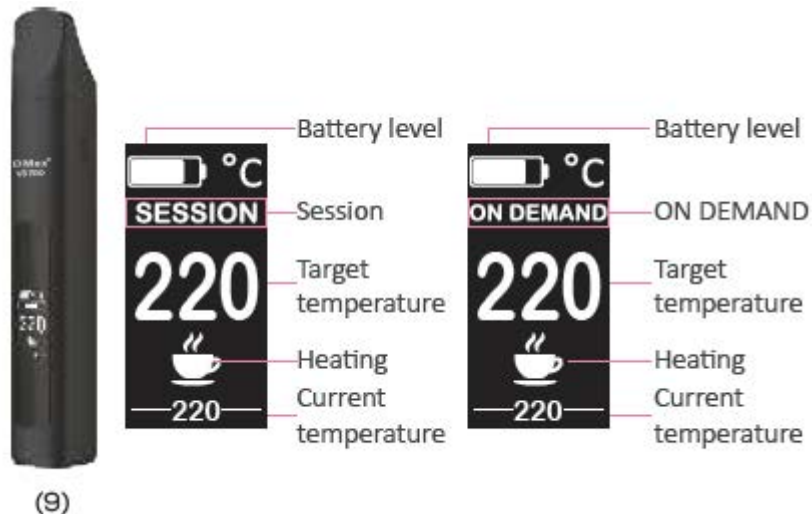

# 10. CLEANING & MAINTENANCE

Fully charge device before first use. Please use the provided USB-C cable to charge your device.

To keep the XMAX V3 PRO working optimally and maintaining the purest taste, we recommend that all parts which come in contact with material or vapor be cleaned regularly.

All removable parts can be disassembled for optimal cleaning.


## Mouthpiece & filter

Gently pull the mouthpiece to remove it. It can be cleaned with soap and water.

For deep clean, immerse all pieces except plastic mouthpiece in isopropyl alcohol for 10-20 minutes, rinse thoroughly with clean water and dry before reassembling.

Stainless steel oven cleaning: use brush to sweep inside and cotton swab dipped in isopropyl alcohol

\* Tip: Perform a burnoff cycle at max temp for 2 minutes after cleaning.

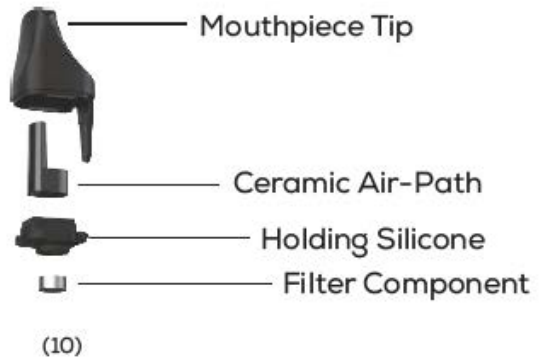



**After using the XMAX V3 PRO or charging, please allow the device to cool down before storage. It should be stored in a clean, dry place protected against the effects of weather and out of the reach of children and pets. If you have any concerns or if there is any problem, please switch off the XMAX V3 PRO and/or remove it from the charger immediately. Do not try to remedy any defect yourself. Contact our customer service directly at [support@topgreencig.com](mailto:support@topgreencig.com)**



EST. 2016

# CANATURA

HEMP  LIFE

Canatura - Online store with the best  
hemp products for your health

[www.canatura.com/en](http://www.canatura.com/en)

Copyright reserved