


Linx Eden comes with a 1 year limited warranty
www.LinxVapor.com

IN THE BOX

- 1 Linx Eden Vaporizer
- 1 Cleaning Brush
- 3 Mouthpiece Glass Tubes
- 1 USB Charger
- 3 Silicone Mouthpiece Caps
- 4 Filter Screens
- 3 Linx Lava Plates
- 1 Magnetic Mouthpiece Cap
- 1 Silicone Sleeve

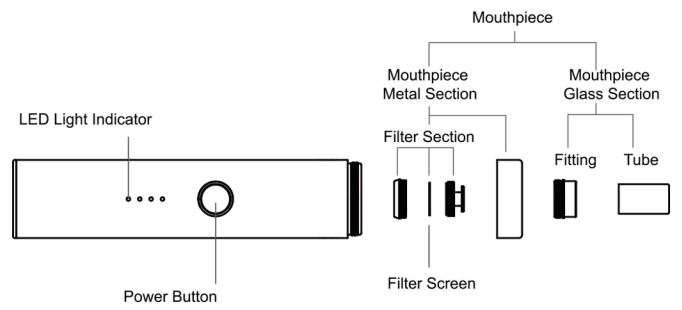

CHARGING

1. Plug the USB charger into the Eden and connect it to a viable USB power outlet.
2. The power indicator on the device will blink white while charging and turn solid once fully charged. A full charge takes three to four hours.

LOADING

1. Unscrew the mouthpiece from the Eden.
2. Load ground material into the quartz heating chamber.
3. Screw the mouthpiece back onto the Eden.

Do not over-pack the heating chamber as it will restrict airflow, resulting in decreased vapor production.

ON/OFF

1. Press the power button five times quickly to turn the device on and off.
2. The device will automatically start heating when it's turned on.
3. The device will also shut off automatically once the set temperature has been reached for four minutes.

VAPING

1. Click the power button five times to turn on the device and start heating.
2. The four LED lights will blink in succession and switch to solid when the desired temperature is reached.
3. Inhale with a slow steady draw and enjoy!

TEMP SETTING

Press the power button three times quickly to cycle between temperatures:

Blue (360°F/182°C)	Green (380°F/193°C)
Yellow (400°F/204°C)	Red (428°F/220°C)

CLEANING

1. Make sure the device is powered off and fully cooled down.
2. Completely disassemble the mouthpiece into parts. Using Isopropyl alcohol and cotton swabs, lightly swab all surfaces of the mouthpiece. Replace the filter and screen as needed.
3. Using the Eden cleaning brush, sweep out the contents of the chamber. Using a cotton swab dipped in isopropyl alcohol, gently swab the interior of the chamber.

BATTERY INDICATION

Once the Eden reaches the desired temperature, the four vertical LED lights will display how much charge the battery currently has.

4 LED = 100% 3 LED = 75% 2 LED = 50% 1 LED = 25%

LOW POWER INDICATION

The Eden will blink white ten times to indicate the battery power is low. Fully charge the battery before the next use.

LAVA PLATES (OPTIONAL)

Linx Lava Plates allow you to vaporize both extract and dry material simultaneously. Spread your material (about the size of a grain of rice) onto one side of the Lava Plate. Place a second Lava Plate on top of your extract. Load the Eden half way with dry material and place the lava plates on top. Re-attach mouthpiece, power on and enjoy.

LAVA PLATE CLEANING

1. Submerge the Lava Plates in Isopropyl alcohol.
2. Allow to soak for one hour.
3. Remove the Lava Plates from the alcohol and allow fifteen minutes to dry.

SAFETY WARNINGS

Do not use this device while charging. This will cause damage to the device.

To prevent the device from overheating, do not leave it charging overnight.

Do not charge unit on bare carpet or rugs.

Do not drop, deform, bend, crush, puncture, microwave or paint this device.

Take caution and dispose in the correct receptacle. Do not dispose in trash.

SAFETY DISCLAIMERS

Keep this device away from children.

Use caution when handling this device, the atomizer area will become hot during use and while cleaning.

Do not clean this device in any way other than instructed by Linx Vapor.

Do not attempt to repair or modify this device yourself.

Do not use in extreme environments such as high temperatures, high humidity, and avoid contact with liquids during use.

Do not use a damaged Linx Vapor charger or non-Linx Vapor charger. Incompatible chargers may carry a different voltage. Use only the charger provided. Failure to do so will void the limited warranty offered on Linx Vapor products.

LEGAL DISCLAIMER

Do not allow children, women who are pregnant or breastfeeding or those with a life-threatening illness to use this device. Linx Vapor and its affiliates are not responsible for any damage or personal injury caused by inappropriate, incorrect or irresponsible use of the device. The Linx Eden is not a medical device and is not intended to diagnose, cure, treat or prevent any disease or other conditions. If you have any health problems, consult your doctor before using the Linx Eden. The Linx Eden is not intended to administer medical or illegal products of any kind, doing so voids the warranty. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under the law of local jurisdiction.

(CAUTION MOUTHPIECE MAY GET HOT WITH CONTINUAL USE)

Scan to watch!



LinxVapor.com



21+
ONLY
FC CE RE PA X

FOLLOW US
@LINXVAPOR.COM



EST. 2016

CANATURA

HEMP  LIFE

Canatura - Online store with the best
hemp products for your health

www.canatura.com/en

Copyright reserved