



FURNA

Owners Manual

Manuel du propriétaire

Manual del propietario

Español

Français

English

Read Before Use – Warnings, Liability and Terms of Use

NOT FOR SALE TO MINORS. FOR ADULT USE ONLY.
KEEP THIS DEVICE AND ITS COMPONENTS OUT OF REACH OF CHILDREN.

If you have any questions or concerns about vaporization, please speak to your health care provider.

WARNINGS

Follow all instructions for use.

- Do not use this or any vaporizer if the user has a respiratory tract or lung condition.
- Keep your FURNA Vaporizer and its components out of the reach of children and pets.
- Use your FURNA Vaporizer only with legal plant and concentrate materials.
- Only use the FURNA Vaporizer when fully assembled according to the instructions provided.
- Use only with FURNA accessories and parts. Only use the charging cord provided.

- Do not use your FURNA Vaporizer if it appears to be damaged, broken or is operating in an unusual or erratic manner – contact customer support.
- Do not attempt to repair, disassemble or tamper with your FURNA Vaporizer. Any attempt to do so, or irresponsible use will void any warranty and can result in serious injury.
- Never use the FURNA Vaporizer while it is being charged.
- Do not leave the FURNA Vaporizer unattended while it is being operated. After use, turn off the FURNA Vaporizer.
- Do not operate your FURNA Vaporizer without the mouthpiece properly installed. The oven is extremely hot when in use.
- Do not use your FURNA Vaporizer without the ceramic coil, silicone parts or screen installed in the mouthpiece of the device.
- Ensure charging cord is disconnected from the FURNA Vaporizer before removing oven.
- Remove oven from FURNA Vaporizer before filling or cleaning oven.
- Do not attempt to remove any contents from the oven or clean your FURNA Vaporizer until the oven and components have completely cooled.
- Do not use your FURNA Vaporizer if it is unusually hot to the touch.

Read Before Use – Continued

- Do not expose your FURNA Vaporizer to extremely high or low temperatures.
- Do not store the FURNA Vaporizer in hot conditions or near heat sources.
- Never immerse the FURNA Vaporizer in liquids. If this occurs, stop using and discard the FURNA Vaporizer.
- Protect the FURNA Vaporizer from prolonged direct sunlight, rain, snow, sleet, or high humidity.
- Do not use your FURNA Vaporizer if by some fluke, or by intention, it is put in a dishwasher, washing machine, toilet, or dryer.
- Charge your FURNA Vaporizer using a certified cable and power source to avoid damage to battery, potential, fire, or explosion.
- The FURNA Vaporizer contains a Lithium-ion battery which can present a serious fire or explosion hazard if damaged, defective, or improperly used. Use the FURNA Vaporizer only as directed and do not use if signs of damage. Dispose of or recycle in accordance with local requirements.
- Do not dispose of the battery or any component of your FURNA Vaporizer in a fire as it could cause an explosion or other serious injury.

Warranty and Liability

Furna Inc. as the sellers hereby guarantee the customer that the product will be free from defects in accordance with best practices, and pursuant to our General Terms and Conditions (GTC), upon which the purchasing agreement are based. Furna will only be subject to a warranty obligation if the customer has purchased the products directly from us. If products are purchased from third parties, warranty claims may only be asserted against these third parties, and Furna cannot provide any information on the content of such claims. Normal wear and tear to the products is not considered a defect under warranty.

The manufacturer is not responsible for any damage or personal injury caused by inappropriate, incorrect, or irresponsible use.

For any inquiries please contact:

FURNA Inc.
360 - 137 Glasgow Street
Kitchener, Ontario
N2G 4X8 Canada

[getfurna.com/contact-us](https://www.getfurna.com/contact-us)

info@getfurna.com

Safety and Certifications



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.



This mark indicates conformity and compliance with health, safety, and environmental protection standards for products sold within the European Economic Area.



This device may not be disposed of in household waste. It contains materials that can be reclaimed and recycled, and a built in lithium-ion battery that must be discharged before use. Please use proper disposal methods to ensure environmental and personal safety.



This device is compliant with the restriction of the use of certain hazardous substances in electrical and electronic equipment.



Many of the parts and components in this product are recyclable. For the sake of our shared planet, please recycle this product through the proper facilities.



This device is not for the use of minors. Please refer to the rules and regulations in your area before using this product to understand use and restrictions.



The use of this device is not recommended for those who are pregnant or intending on becoming pregnant.



The FURNA Vaporizer has a cool down feature to keep the ovens safe. After seven (7) minutes of continuous use the Vaporizer will cool the oven before it will heat again.

Filling and Using the FURNA Vaporizer

For Images please refer to the Quick Start Guide.


- Eject the oven by sliding up.
- Open the oven by pressing down on the mouthpiece and turning counterclockwise.
- Remove any previously used material with the multi-tool.
- Place the funnel on top of the open portion of the oven to allow for clean and easy packing.
- Add as much ground herb as you prefer up to approximately 0.23 grams. Do not over pack as it will impact the airflow and experience.
- Tamp the ground herb firmly to the level shown to the right.
- Replace the mouthpiece by pushing down and turning clockwise.
- Push the oven back into the FURNA Vaporizer in the active (mouthpiece outward) position.
- Press B1 5 times in less than 2 seconds, or press B1 and B2 at the same time to turn of the FURNA Vaporizer.
- Once the desired temperature is reached, inhale gently on the mouthpiece.



Use caution when removing the oven from the FURNA Vaporizer. The housing or components, in particular the magnets, can be hot when it is first ejected.



Do not open, clean or refill the oven while hot. Allow the oven to cool completely.

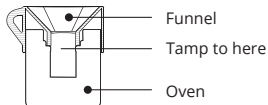

Do not leave the FURNA Vaporizer unattended during use.

Cleaning the FURNA Vaporizer

- Eject the oven.
- Open the oven by pressing down on the mouthpiece and turning counter clockwise.
- Remove any previously used material with the multi-tool.
- Use the multi-tool to push out the silicone nib.
- Remove the nib screen by gently pushing back and edge of the silicone and picking out the screen.
- Remove the ceramic cooling coil by gently squeezing the top portion of the nib. Take caution with the coil as it is brittle and may break if dropped on a hard surface.
- Clean all of the mouth piece with isopropyl alcohol.
- Use a brush to scrub parts if necessary. Some staining may occur, but it will no effect the function of the product.
- Allow the parts to dry and reassemble.



Isopropyl alcohol is flammable. Follow safety instructions provided by manufacturer. Keep away from heat sources and open flame.



Note the orientation of the ceramic coil.



Nib
Screen




Ceramic
Coil



Silicone
Nib



Mouthpiece

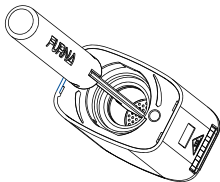

- If additional cleaning of the oven is required after scraping our the material with the multi-tool, dunk the brush in isopropyl alcohol and scrub out the oven.
- Allow the oven to dry inverted.
- When all components are dry, reassemble.

TIP: Re-seat the nib screen by placing it on the ceramic coil, and gently moving it in a circular motion until the silicone encompasses the edge of the nib screen.








Do not submerge the oven.

Device Menu

The menu is available when the FURNA Vaporizer is on.
The buttons are identified earlier in this document.

To enter the menu system, press B2. Once in the menu, B2 will cycle through the different menus. Press and hold B2 to exit the menu without making changes at any time.

-  Adjust the temperature in 5 degree increments.
-  Set the screen brightness.
-  Change the units from Celsius to Fahrenheit.
-  Set the language of the FURNA Vaporizer.
-  Change the symbol for the current oven.

Press B1 to enter into the displayed menu.

 (B1) → 

Press B1 to increase the set temperature by 5 degrees. When you reach the maximum temperature, the arrow icon changes showing that you will return to the minimum temperature when you press B1 again. When you find the temperature you want, press B2 to save the setting.

 (B1) → 

Press B1 to cycle between the screen brightness settings. When you find the brightness you want, press B2 to save the setting.

 (B1) → 

Press B1 to cycle between unit settings. Press B2 to save the setting.

 (B1) → 

Press B1 to cycle between the available languages. When you find the Language you want, press B2 to save the setting.

 (B1) → 

Press B1 to cycle between the symbols. The flashing symbol is the selected icon, press B2 to save the setting.

getfurna.com

© 2020 FURNA Inc. All Rights Reserved.

FURNA name, logos, and taglines are trademarks of Furna Inc.
360-137 Glasgow Street, Kitchener, Ontario, N2G 4X8 Canada

HDW-1109-001

Distributor:

Near Dark GmbH
Bonner StraÙer 11a
53773 Hennef, Deutschland

CE  [neardark.de](https://www.neardark.de)



EST. 2016

CANATURA

HEMP  LIFE

Canatura - Online store with the best
hemp products for your health

www.canatura.com/en

Copyright reserved