


21+

User Manual

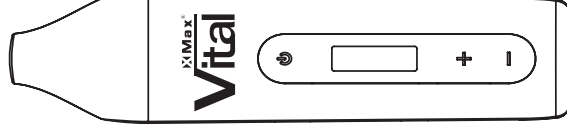


YOUR VAPORIZER
VITAL

Caution

Please do not put this product away or leave it for extended periods of time with low charge because if the battery falls below 2% then it will no longer accept a charge.

Charge the battery with a good quality & dedicated charger. Never more than 5V/1A. Otherwise, it will cause damage to battery, serious personal injury, fire.



DISCLAIMER

Thank You for purchasing the XMAX Vital aroma therapy diffuser. We hope you enjoy the quality and performance of your XMAX Vital.

To ensure optimal performance and safety of your XMAX Vital, please read this entire manual for instructions.

Please read and follow instructions carefully. Understand them fully before using your Vital.

We recommend you keep these instructions in a safe place for future reference.

1

XMAX Vital is not a medical device and is not intended to diagnose, cure, treat or prevent any diseases or other conditions. If you have any health problems, consult your doctor before using the XMAX Vital.


This product should not be used by children, women who are pregnant or breast feeding, or those with life threatening illnesses without first consulting a doctor. Never use before driving or operating machinery.

XMAX Vital is not intended to administer medicinal or illegal substances of any kind. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under the law of your jurisdiction.

THIS PRODUCT DOES NOT CONTAIN ANY PLANT MATERIAL.


2

XMAX VITAL OVERVIEW

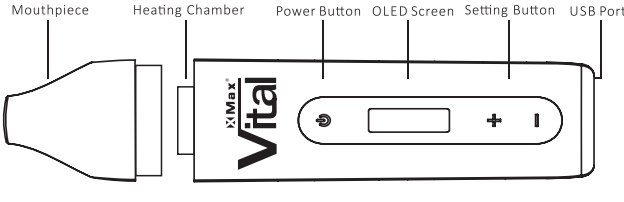

3

XMAX VITAL CONTENTS

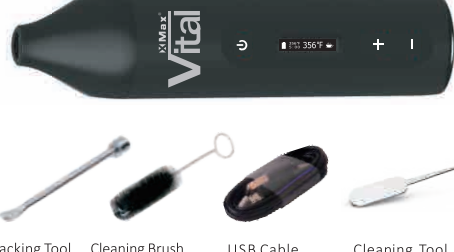

4



SPECIFICATIONS

Battery Capacity	18650 3.7V 2600mah
Charger/Output Voltage	5.0V/1A
Charging	Micro USB charging
On/Off	Press the Power button 3 seconds
Safety Power Duration	5minutes and 10 minutes optional
Heating Chamber	Ceramic with embedded heating element
Screen	OLED
Temperature Range	100°C -240°C (212°F -464°F)

5



OPERATING GUIDE

- Remove XMAX Vital's mouthpiece, exposing the heating chamber.
- Always fill the chamber with moderate ground Botanicals, DO NOT compress the plant material too much so that the airflow is not unnecessarily impeded. Then insert mouthpiece back onto the heating chamber.




6

- Hold the Power Button for 3 Seconds to turn on the XMAX Vital and it will begin to heat up at once under the default settings. The "356°F" will keep blinking during the heat-up stage. Wait for the "356°F" become solid and You are ready to puff until the "356°F" stops blinking.
- Setting temperature, press the "+" to increase temperature, press the "-" to decrease temperature. (XMAX Vital will automatically remember your last setting when restart.)

7

- The "356°F" will solid once the selected temperature reaches. Then inhale slowly and deeply from the mouthpiece till the OLED screen off.
- Temperature switchover between Fahrenheit and Celsius. Hold the Power button and "-" button at the same time for 2 seconds.
- Timer switchover between 5 minutes and 10 minutes. Hold the Power button and "+" button at the same time for 2 seconds.

8

CHARGING

- To protect and extend the battery, It is recommend your XMAX Vital be charged with wall adapter for at least 6 hours before its first use.
- When Charging, the OLED screen will light on, The battery icon will change to show battery charging condition. The icon gauge will be full when battery fully charged. The XMAX Vital will automatically power off if no operation within 60 seconds after fully charged.

After using the XMAX Vital vaporizer and power adapter, allow them to cool down before storage. Store the Vital vaporizer in a dry and cool place to protect against the effects of weather and out of reach of children or unqualified persons.

9

CLEANING/AND MAINTENANCE

To maintain the XMAX Vital, it is recommended to clean the chamber and the mouthpiece after every use.

- Clean the rubber mouthpiece, use a cotton swab and wipe the inner part of the rubber mouthpiece then wipe again with a damp paper towel.
- Clean the filter, after using, use the brush tool to gently clean the filter. For a deeper clean, use your hands or damp paper towel to gently clean the filter with a mixture of soap and water.
- Clean ceramic heating chamber, deactivate the XMAX Vital by locking it. Make sure the vaporizer has not been used for at least 30 minutes and is completely cooled off, use the clean brush to gently clean the walls of the heating chamber. You may use small wipes to clean out any leftover particles.

DO NOT clean the whole device with water or submerge.
 DO NOT inject any liquid or oil into the ceramic chamber.

10

WARRANTY AND LIMITATION

To claim under the warranty, please contact your retailer.

We warrant solely to the original purchaser of the Products that within the warranty period (as defined below), the Products will be free from defects in materials and workmanship under normal use, and will conform to Company's published specifications of the Products. The foregoing warranty is subject to the proper storage, transportation and use of the Products, but does not include defects in batteries, buttons and similar parts subject to wear and tear or deterioration and other special, consequential or incidental damages. Customer agrees to accept responsibility for such risks and to not hold the manufacturers, distributors or retailers (including owners and employees) responsible for any incident, injury to persons, or damage to property.

Upon delivery, Customer should inspect the Products immediately for

11

conformity and visible defects. If there is a quality problem, Customer shall give Company written notice of any non-conformities or visible defects regarding the Products and contact Company in writing concerning return or repair. Our team shall provide on-site service within 24 hours after receiving Customer's written notice. Customer must provide photos/video or other evidence as a proof within 7 days.

The warranty period for XMAX Vital Vaporizer begins on the date when the Product is physically delivered to the Customer, and is valid for six months thereafter.

Warranty option

- Repair the product defect
- Exchange the product with a new or functionally equivalent product
- The limited warranty does not apply to normal performance degradation of batteries or neglect of use and non-adherence to cleaning instructions.


12

Shipment of claim settlement

- We will resend new product along with Customer's next order.
- If Customer does not plan to make a new order in the short term, Customer can pay the re-sending shipping cost and ask to resend the replacement.

All requests and notices from all Customers under this warranty shall be emailed to support@topgreencig.com


www.topgreen-tech.com
 © Topgreen Technology 2020



13


WARNING

- Do NOT use damaged batteries in all our vaporizers
- Please use our original batteries or high quality batteries from authentic brands instead of clones
- Always use battery suitable for your device. Never carry it loose in your pocket with other metal objects.




14

WARNING



Please do NOT load any liquids into the chamber of all of our vaporizers



Do not over load the device chamber with desired materials, for devices with variable temperature settings please find the best setting that is comfortable and safe for your enjoyment.

15



EST. 2016

CANATURA

HEMP  LIFE

Canatura - Online store with the best
hemp products for your health

www.canatura.com/en

Copyright reserved